



A product of  
**R&D Workshop**  
League City, TX

## SPECIAL ORDER INSTRUCTIONS

Ace Vendor # 52429

Trim-A-Slab is a product of R&D Workshop


Made in U.S.A.




**ACE**  
*Hardware*




3/16

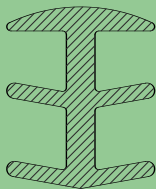


1/2

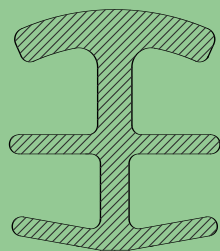

3/4

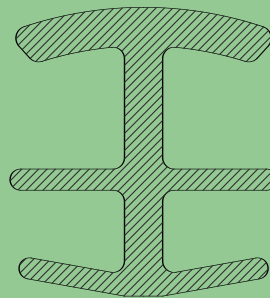

1

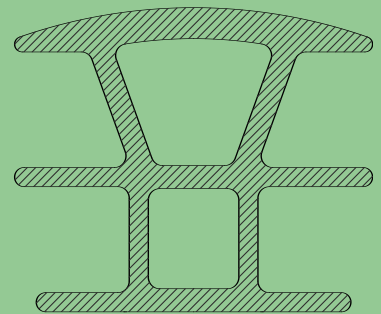
















1-3/8

**SIZE  
CHART**  
(actual size)

Trim-A-Slab is sized to match **the GAP being filled**. The crown will measure greater than the size ( a  $\frac{3}{4}$ " size Trim-A-Slab measures a little over 1 inch across the top). This keeps Trim-A-Slab from falling into the gap.

# TRIM-A-SLAB

Product Description		UPC	Coil length	MSRP
3/16" grey		8 56857 00326 4	500'	\$ 234.00
1/2" Black		8 56857 00308 0	50'	\$ 74.50
1/2" Grey		8 56857 00307 3		\$ 74.50
1/2" Walnut		8 56857 00311 0		\$ 74.50
3/4" Black		8 56857 00302 8	50'	\$ 124.50
3/4" Grey		8 56857 00301 1	50'	\$ 124.50
3/4" Grey		8 56857 00315 8	25'	\$ 62.25
3/4" walnut		8 56857 00310 3	50'	\$ 124.50
1" Black		8 56857 00303 5	25'	\$ 87.25
1" Grey		8 56857 00304 2		\$ 87.25
1" Walnut		8 56857 00312 7		\$ 87.25
1-3/8" Black		8 56857 00306 6	25'	\$ 124.50
1-3/8" Grey		8 56857 00305 9		\$ 124.50
1-3/8" Walnut		8 56857 00313 4		\$ 124.50

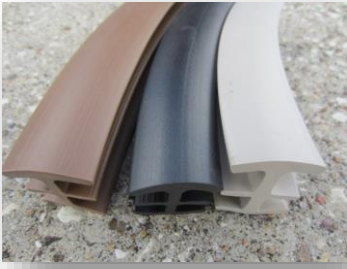

3 colors are standard: Black, Walnut, and Grey. Grey will be the best match to clean, dry concrete. Grey and Walnut may show tire marks and dirt, but can be easily cleaned with soap and water.

## How to install Trim-A-Slab



Press in;  
typically can be  
pressed in by  
hand



Cuts easily with  
pruning shears  
or a PVC cutter

1. Clear gap so no contact occurs below



2. Make Contact with the slab on both sides
3. Cut to length; That's it!

**Applications:** Driveways, sidewalks, patios, pool decks...between two concrete slabs, or between slabs and foundations. Trim-A-Slab is intended for use between rounded-edge slabs. Use on sharp-edged slabs should be evaluated by the end-user, as the crown will sit on top of the slab, and may produce a trip hazard.

For **technical support** please call:

Greg 832-428-8096

Bob 281-910-5511